

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

| Item | When to initialize | Reference |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Power window | <ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse | P. 60 |
| Power back door | <ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse | P. 32 |
| Moon roof (Multi-panel type only) | <ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse | P. 63 |
| Engine oil maintenance data | After changing engine oil | P. 326 |
| Tire pressure warning system | <ul style="list-style-type: none">• When changing the tire inflation pressure by changing traveling speed or load weight, etc.• When changing the tire size. | P. 338 |

